


OPERATOR'S MANUAL

SETTING UP INSTRUCTIONS

INTERNATIONAL

Trailer

OPERATION MAINTENANCE LUBRICATION

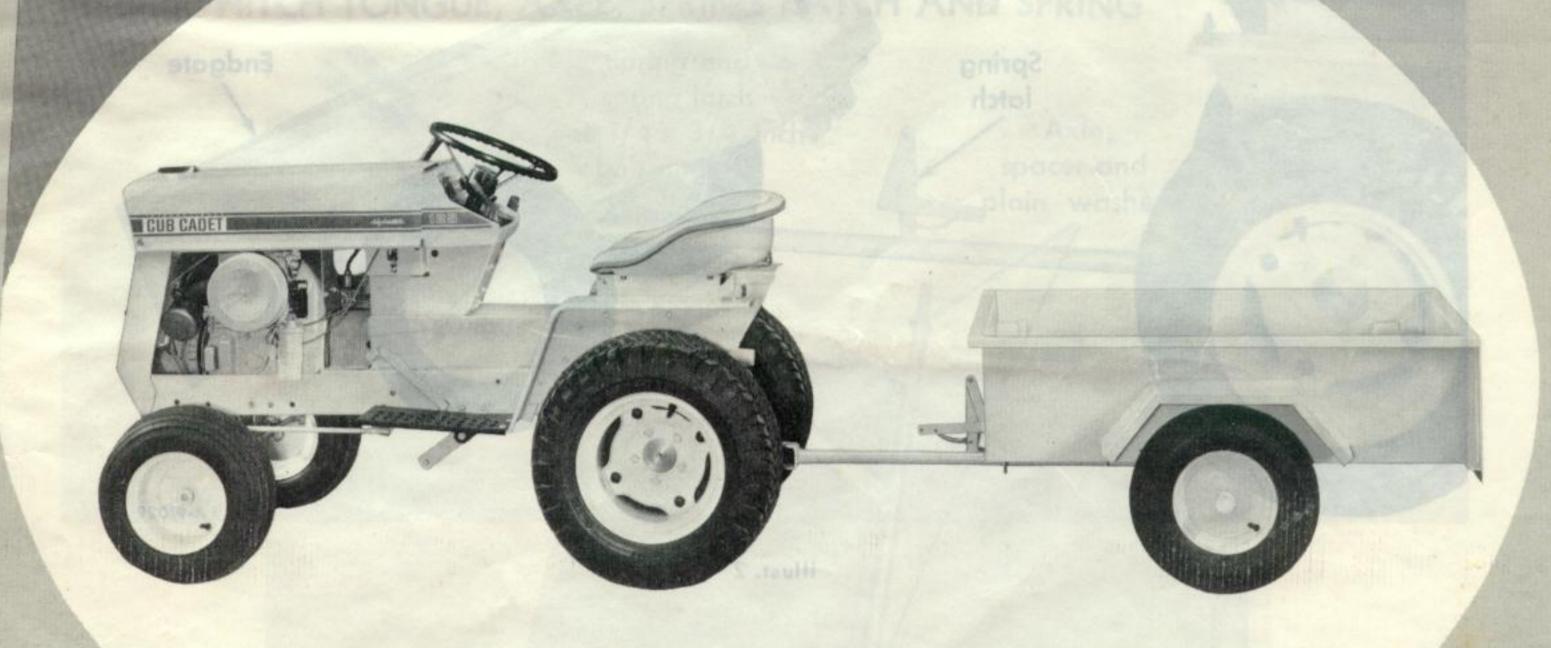

driver's seatt After unloading, pull the frank of the box down until the latch snaps in Made.

Using a pressure lubricator, personically

move the endgate and release the apring latch. The hander will lower itself to the grounders shown in Hay. 2. A cord or rope can be attached

to the spring agon for easy release from the


To The Owner

The Trailer for the International Cub Cadet Tractor is a ruggedly constructed all steel box equipped with a removable endgate to facilitate unloading. It has a volume of 4-1/2 bushels (level load) with a load capacity of over 1/4-ton of sand or similar materials. Stake sockets are also provided for the addition of sideboards for increased capacity of light

voluminous materials such as leaves, grass clippings, brush cuttings, etc. The trailer is equipped with 4.80/4.00-8 pneumatic tires and tubes to cushion the load.

The sturdy constructed dump-type trailer has a wide range of use and is especially adaptable to small acreage farms and also for suburban use.

OPERATING

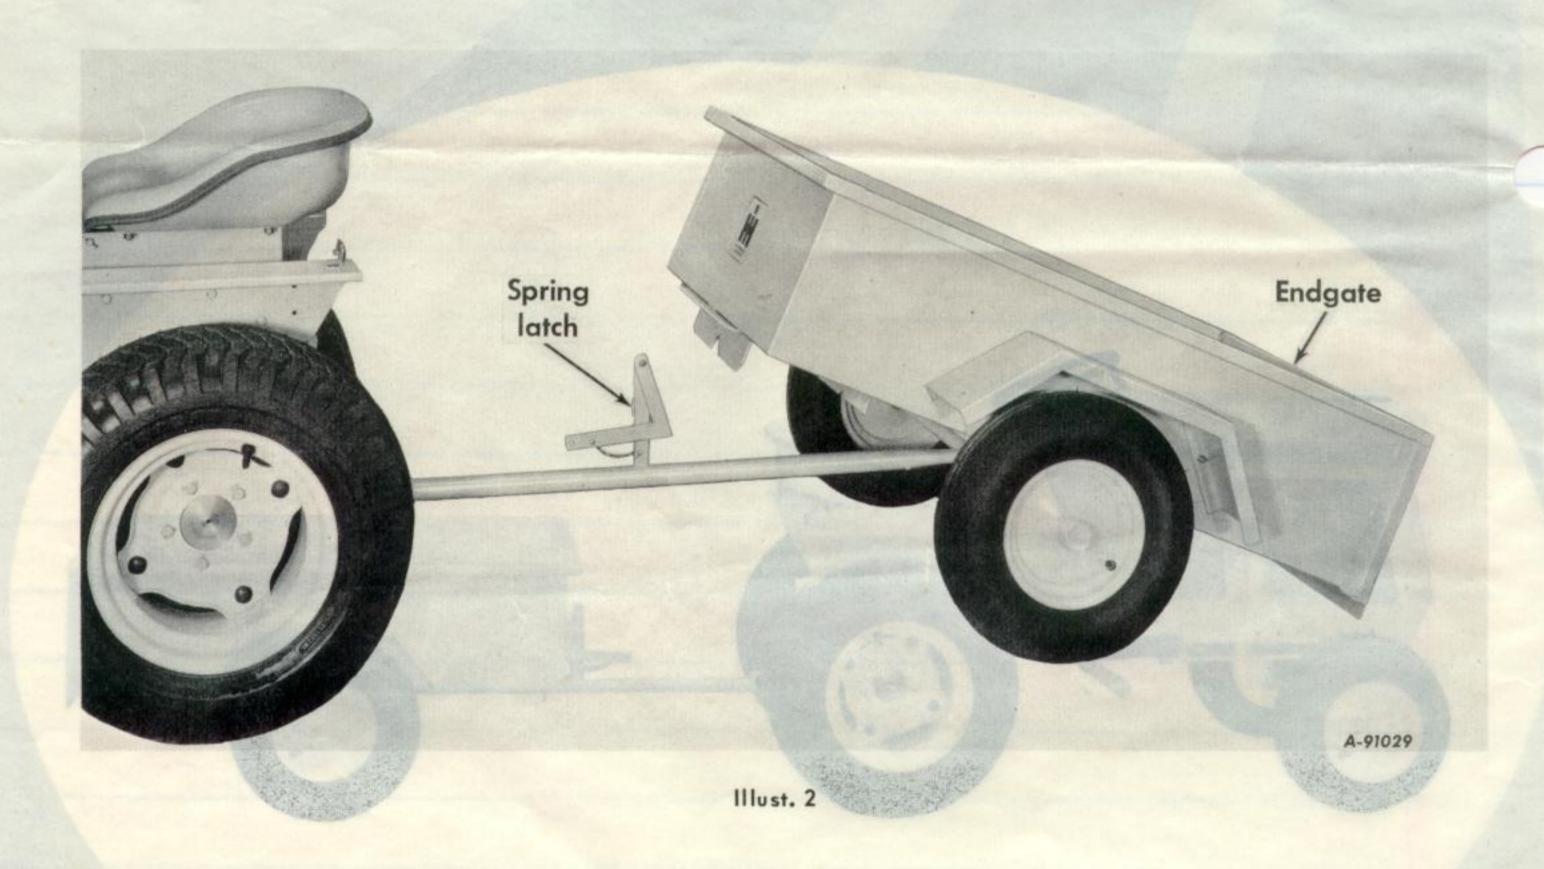


To fully unload the dump-type trailer, remove the endgate and release the spring latch. The trailer will lower itself to the ground as shown in Illust. 2. A cord or rope can be attached to the spring latch for easy release from the

driver's seat. After unloading, pull the front of the box down until the latch snaps in place.

Using a pressure lubricator, periodically lubricate each wheel bearing.


SETTING UP

STEP 1. ATTACHING FENDERS

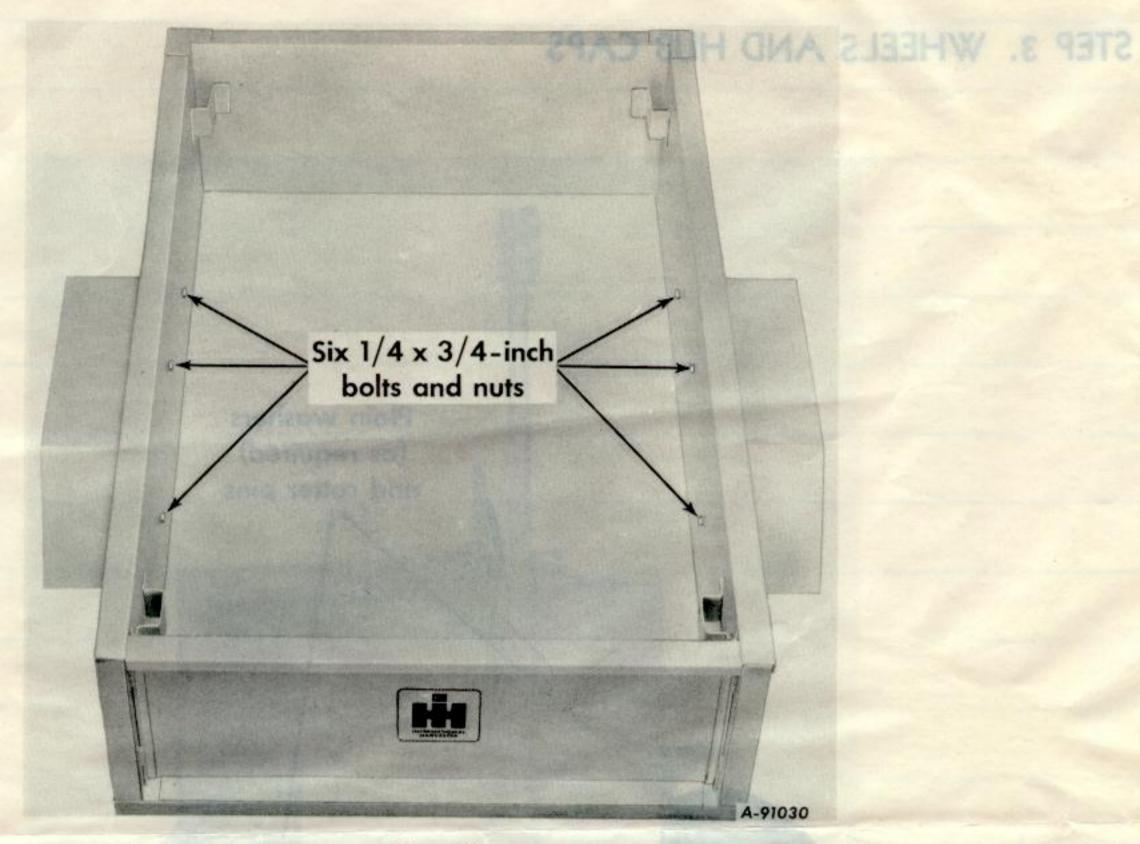

Illust. 3

STEP 2. HITCH TONGUE, AXLE, SPRING LATCH AND SPRING

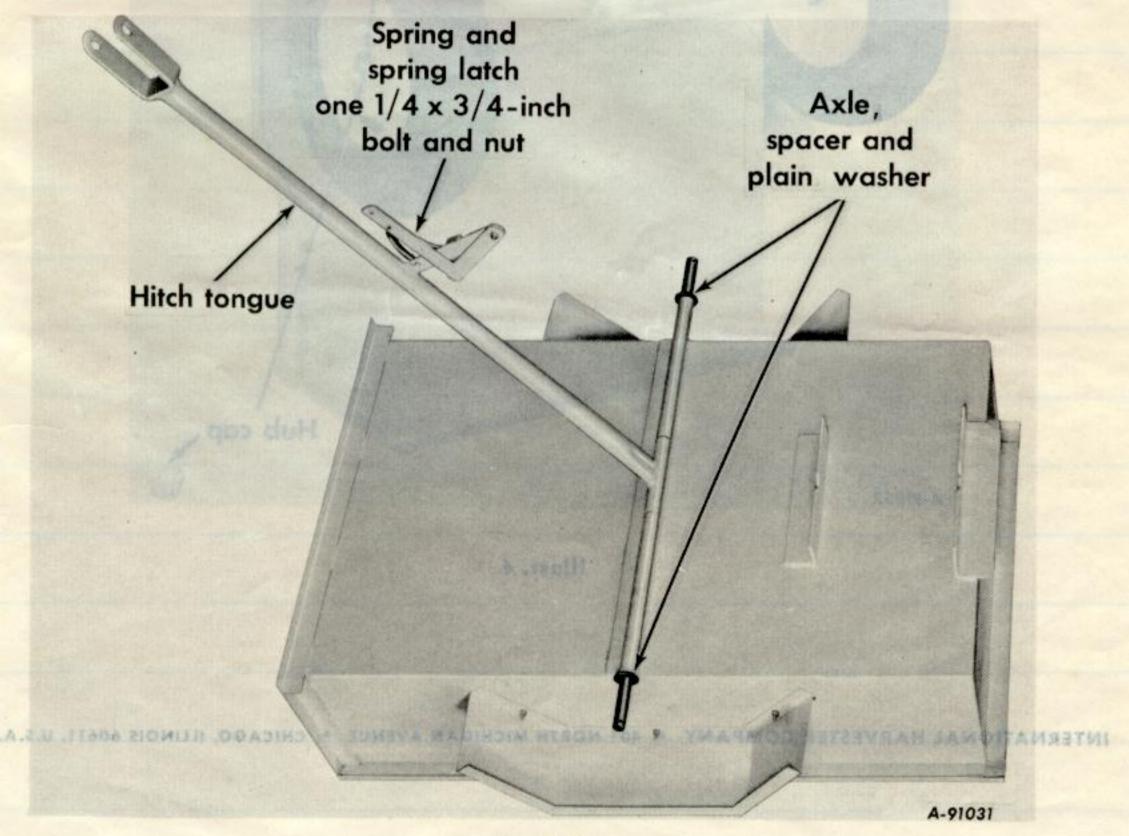


Illust. 3A

SETTING UP

STEP 1. ATTACHING PENDERS

STEP 3. WHEELS AND HUB CAPS

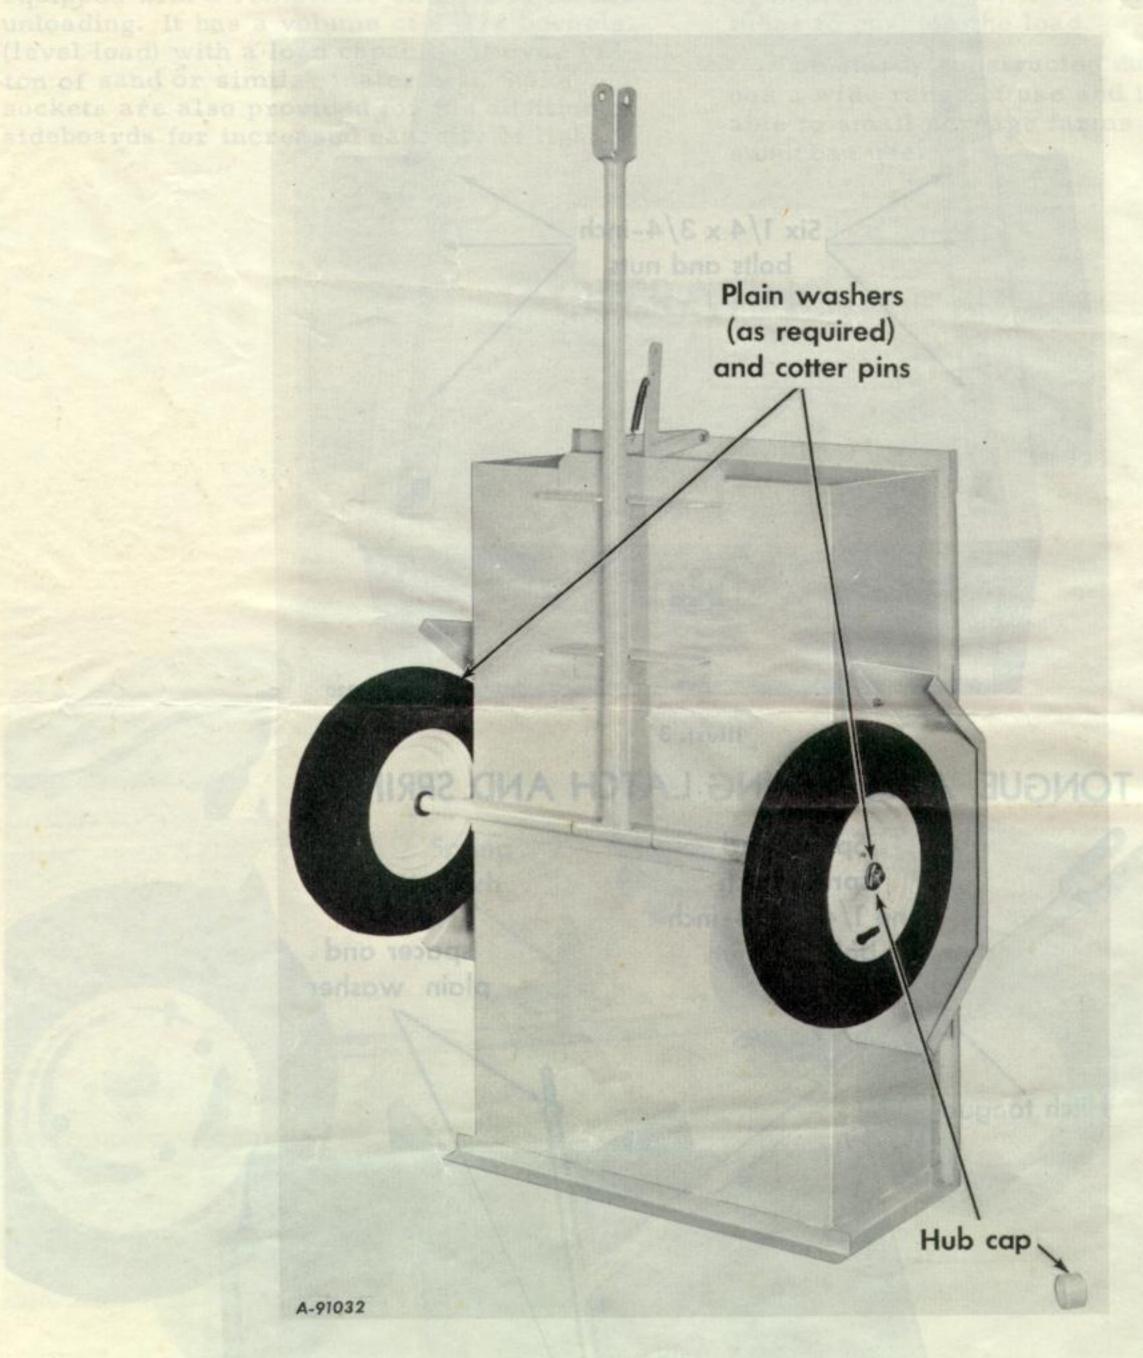

Illust. 4

INTERNATIONAL HARVESTER COMPANY . 401 NORTH MICHIGAN AVENUE . CHICAGO, ILLINOIS 60611, U.S.A.